



zoëcon™

Zoecon Corporation
Pherocon Supply Service
975 California Avenue
Palo Alto, Calif. 94304
415/857-1130


Instructions for Assembling Pherocon™ 1C Traps

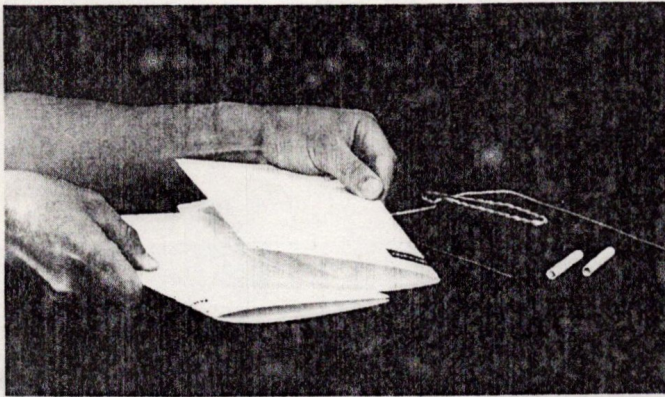


1. Remove one folded trap top, one folded trap bottom, (with sticky inside surface) two spacers and one wire hanger from shipping container.

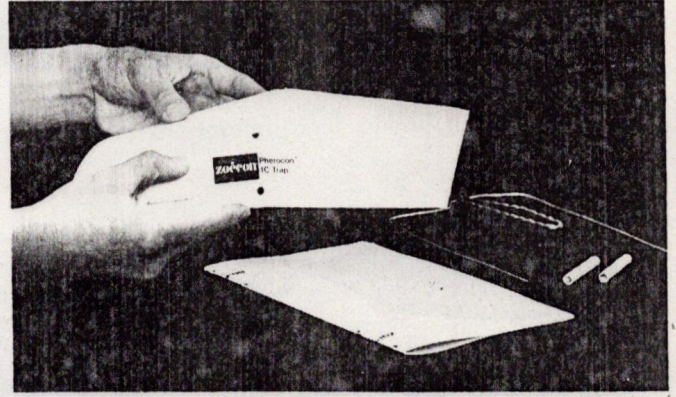


2. Open top section and push down on side panels to position shown. Be sure to fold only along score marks provided.

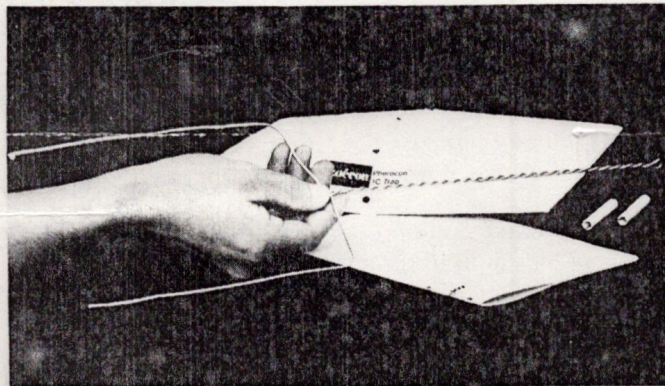


3. Straighten wire hanger to shape shown.

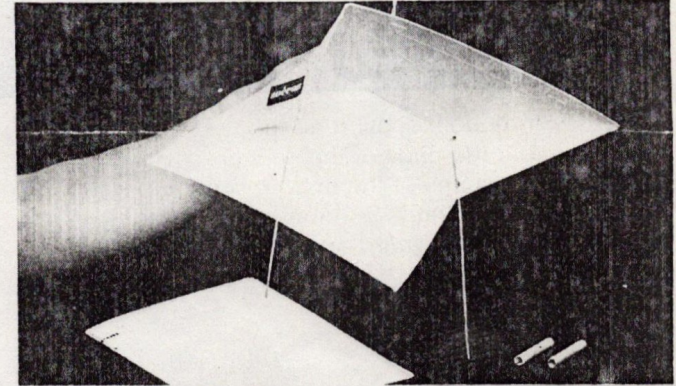


4. Insert ends of wire hanger into holes provided in side panels of top section. Weave wire ends through top holes from the outside and through bottom holes from the inside. With wire ends inserted in holes, push wire hanger down as far as it will go.

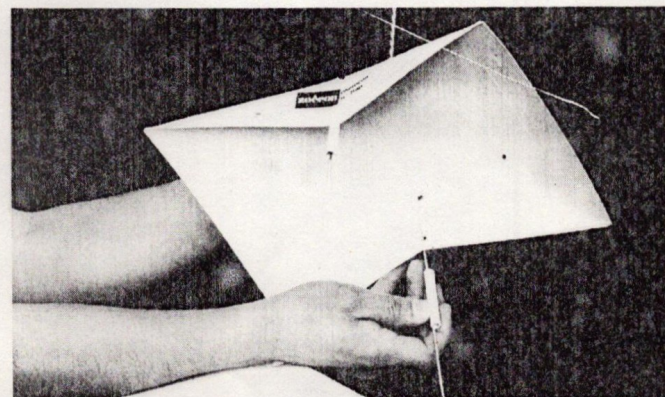


5. Slide one spacer on each of the wire ends. Push them up all the way up to the bottom hole so that the ends of the spacers are caught and held between the wires and the side panels.

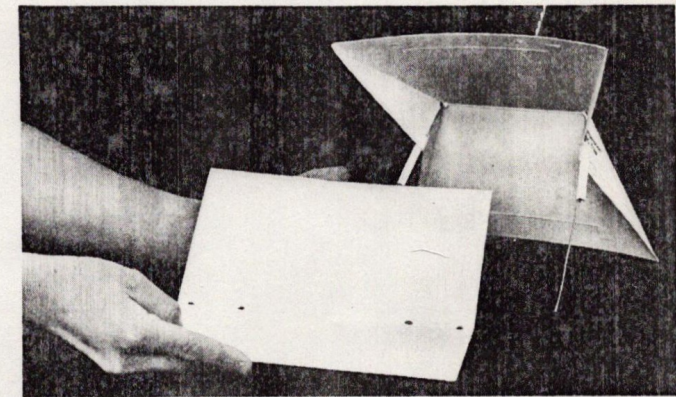


6. Open folded bottom section as shown to expose sticky surface.

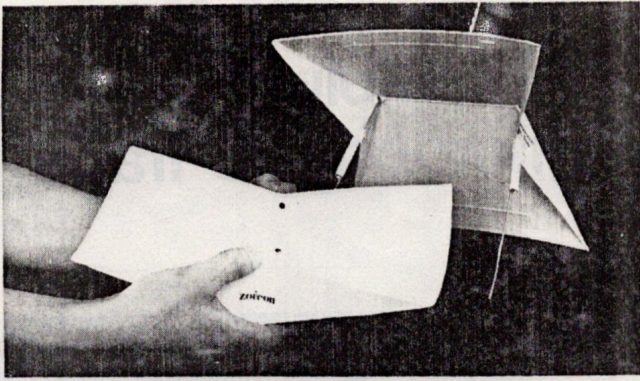


7. Push up on side panels to position shown. Be sure to fold only along score marks provided.

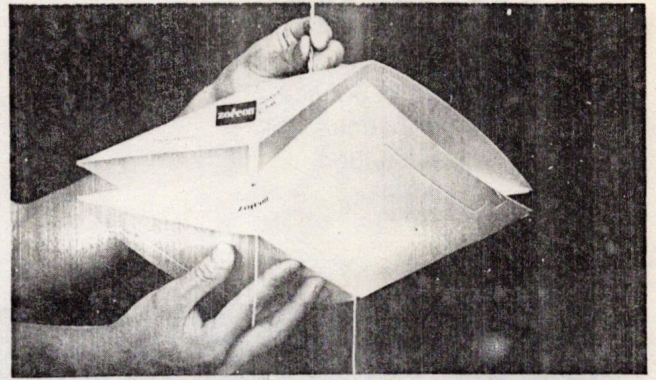

8. Insert ends of wire hanger into holes provided in both side panels of bottom section. Weave wire ends through top holes from the outside and through bottom holes from the inside.

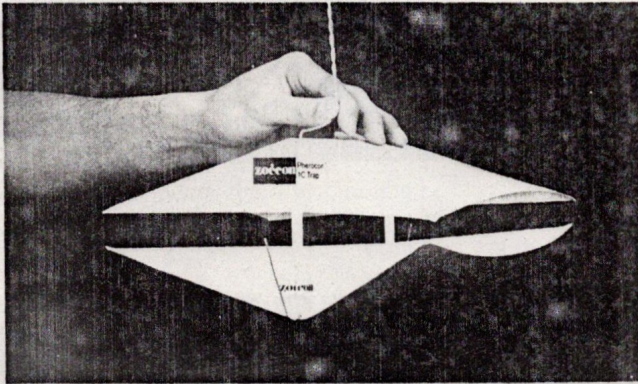

9. Push bottom section all the way up to the top hole so that the ends of the spacers are in line with the top holes of the bottom section between the wires and the side panels. Then bend projecting wire ends outward and upward as shown.

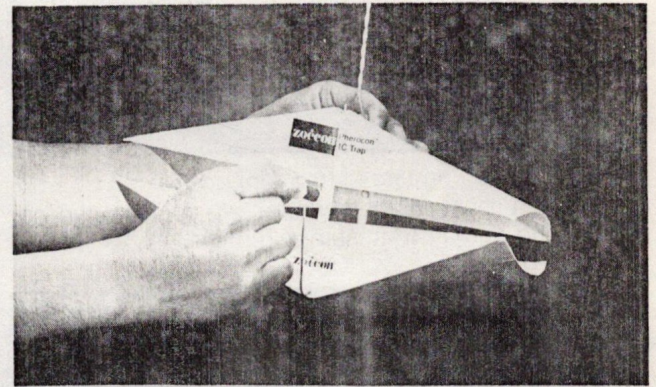

10. Place Pherocon Cap directly on sticky surface by dropping it through the side opening and into the center of the trap. To hang trap in tree, wrap braided portion of wire securely around limb. Place trap in orchard according to location and density recommendations.

Note: To facilitate replacement of caps and the removal of insects, bottom section may be lowered on one side by straightening the wire end on that side. Be sure to return bottom section, spacer and wire end to their original positions.